KitchenAid®

CABINET PARTS

REFRIGERATOR

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

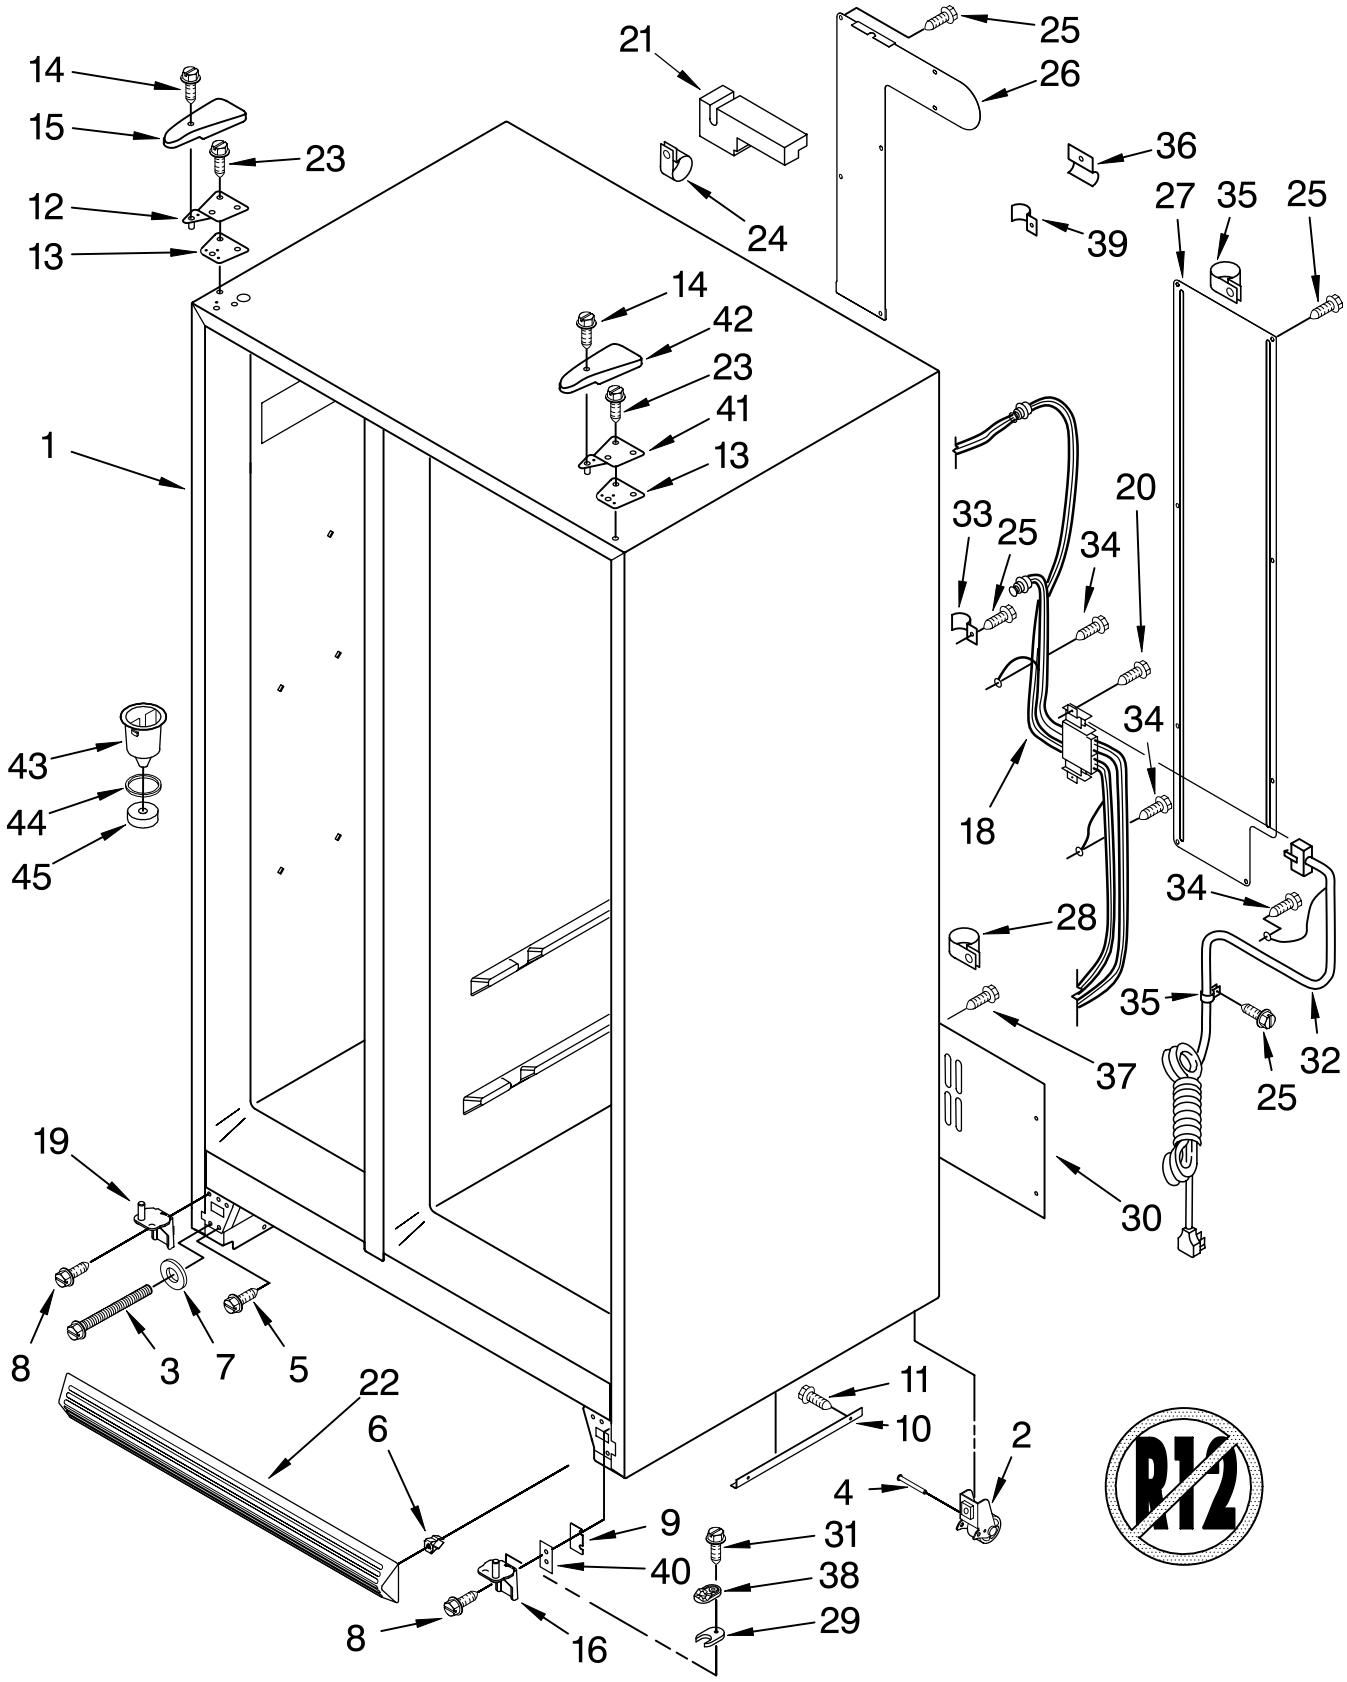

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

Illus. No.	Part No.	DESCRIPTION
1		Cabinet (Not a Service Part)
2	4343775	Roller (4)
3	4343784	Screw, Rear Roller Adjust
4	4343776	Pin, Clevis (4)
5	4343785	Screw, Front Roller Adjust
6	4343604	Clip, Grille
7	4343786	Washer
8	4343782	Screw
9	4343787	Spacer
10	4343774	Support (2)
11	4343788	Screw
12	4343999	Hinge Top (L.H.)
13	4343714	Shim, Hinge Top
14	4343715	Screw
15		Hinge Cover (FC)
	4343995	White
	4343996	Almond
	4343997	Black
16		Hinge Bottom (R.H)
	4343781	White
	4343780	Black
18	4343790	Wire Harness
19		Hinge Bottom (L.H)
	4343779	White
	4343778	Black
20	4343772	Screw
21	4343783	Air Baffle
22		Grille
	4343605	White
	4343606	Almond
	4343607	Black
23	4343684	Screw
24	4343777	Clamp
25	4343759	Screw
26	4343707	Wire Cover
27	4343659	Back Cover
28	4343705	Clip, Water Tube
29		Shim, Door Closer
	4343755	White
	4343756	White
	4343757	Black
	4343758	Black
30	4343978	Cover, Unit
31	4343754	Screw
32	4343760	Power Cord
33	4343752	Tube Clamp
34	4343765	Screw
35	4343661	Clamp
36	4343721	Clamp, Service Cord
37	4343979	Screw
38		Door Closer, Lower Cam (2)
	4343795	White
	4343794	Black
39	4343702	Clip
40	4343977	Shim, Hinge
41	4343998	Hinge Top (R.H.)
42		Hinge Cover (RC)
	4344003	White
	4344004	Almond
	4344005	Black
43	4344308	Funnel, Drain
44	4344311	Seal
45	4344310	Gasket

REFRIGERATOR LINER PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

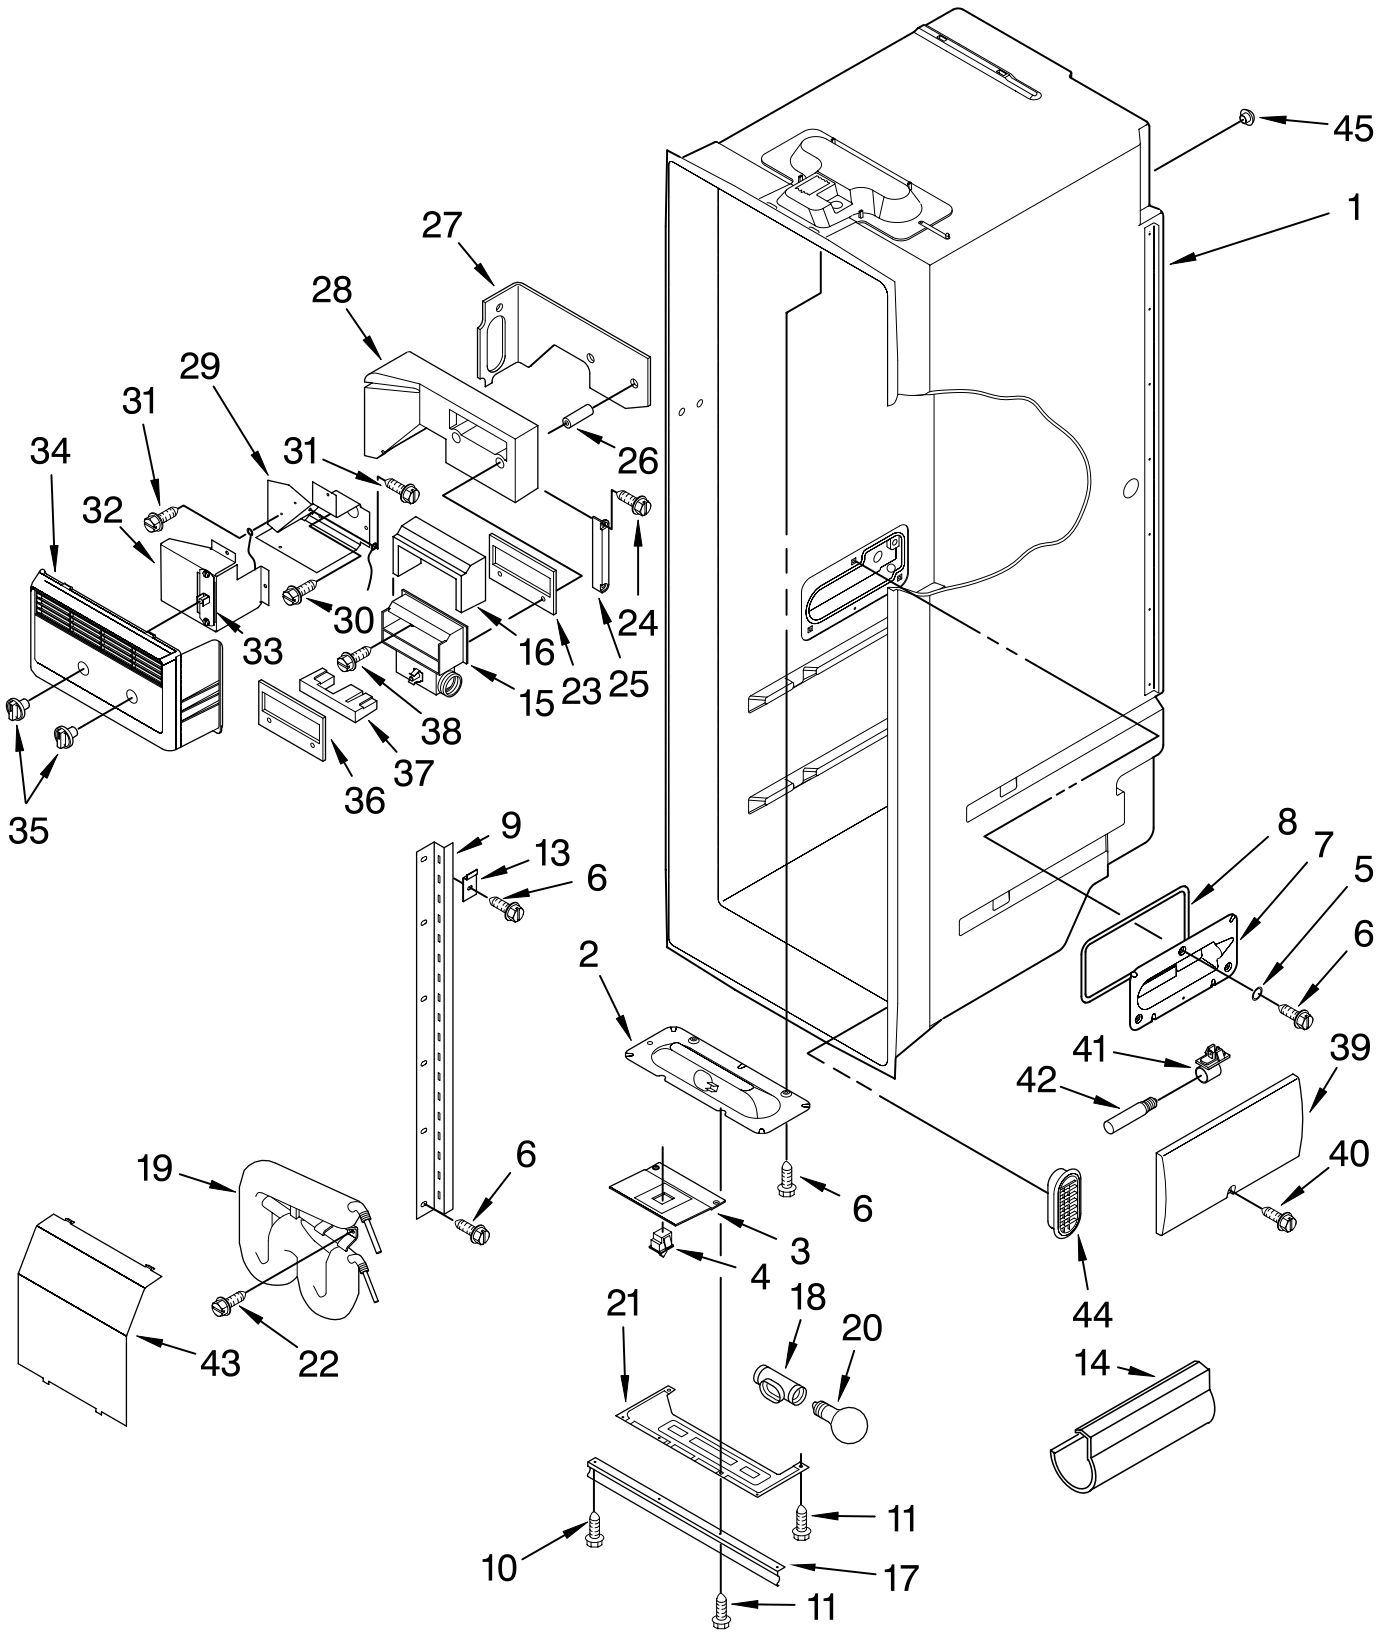

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

REFRIGERATOR LINER PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

Illus. No.	Part No.	DESCRIPTION
1		Liner (Not A Serviceable Part)
2	4343927	Housing, Top Light
3	4343928	Cover, Light Switch
4	4343930	Light Switch
5	4343682	Ground Clip
6	4343652	Screw
7	4343932	Housing, Side Light
8	4343933	Gasket
9		Shelf Ladder
	4343976	Right Side
	4343975	Left Side
10	4343665	Screw
11	4343727	Screw (4)
13	4343692	Bracket Retainer
14	2179375	Wine Rack
15	4343649	Control, Damper
16	4343666	Insulation, Damper
17	4343654	Shield, Light
18	4343642	Socket, Dual
19	4343773	Reservoir
20	4343660	Light Bulb (2)
21	4343726	Light Lens, Top
22	4343675	Screw
23	4343681	Gasket, Damper
24	4343690	Screw
25	4343689	Clamp, Air Duct
26	4343676	Spacer, Damper
27	4343683	Gasket, Air Duct
28	4343658	Air Duct
29	4343668	Bracket, Rear
30	4343669	Screw (4)
31	4343691	Screw (2)
32	4343677	Thermostat Bracket
33	4343711	Thermostat
34	4344060	Cover, Control
35	4343710	Knob, Thermostat
36	4343724	Gasket, Front
37	4343650	Insert
38	4343674	Screw
39	4343751	Light Lens, Side
40	4343749	Screw
41	4343800	Light Socket
42	4343796	Light Bulb
43	4343646	Cover, Reservior
44	4343925	Grille, Air Return
45	4343926	Plug, Button

REFRIGERATOR SHELF PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

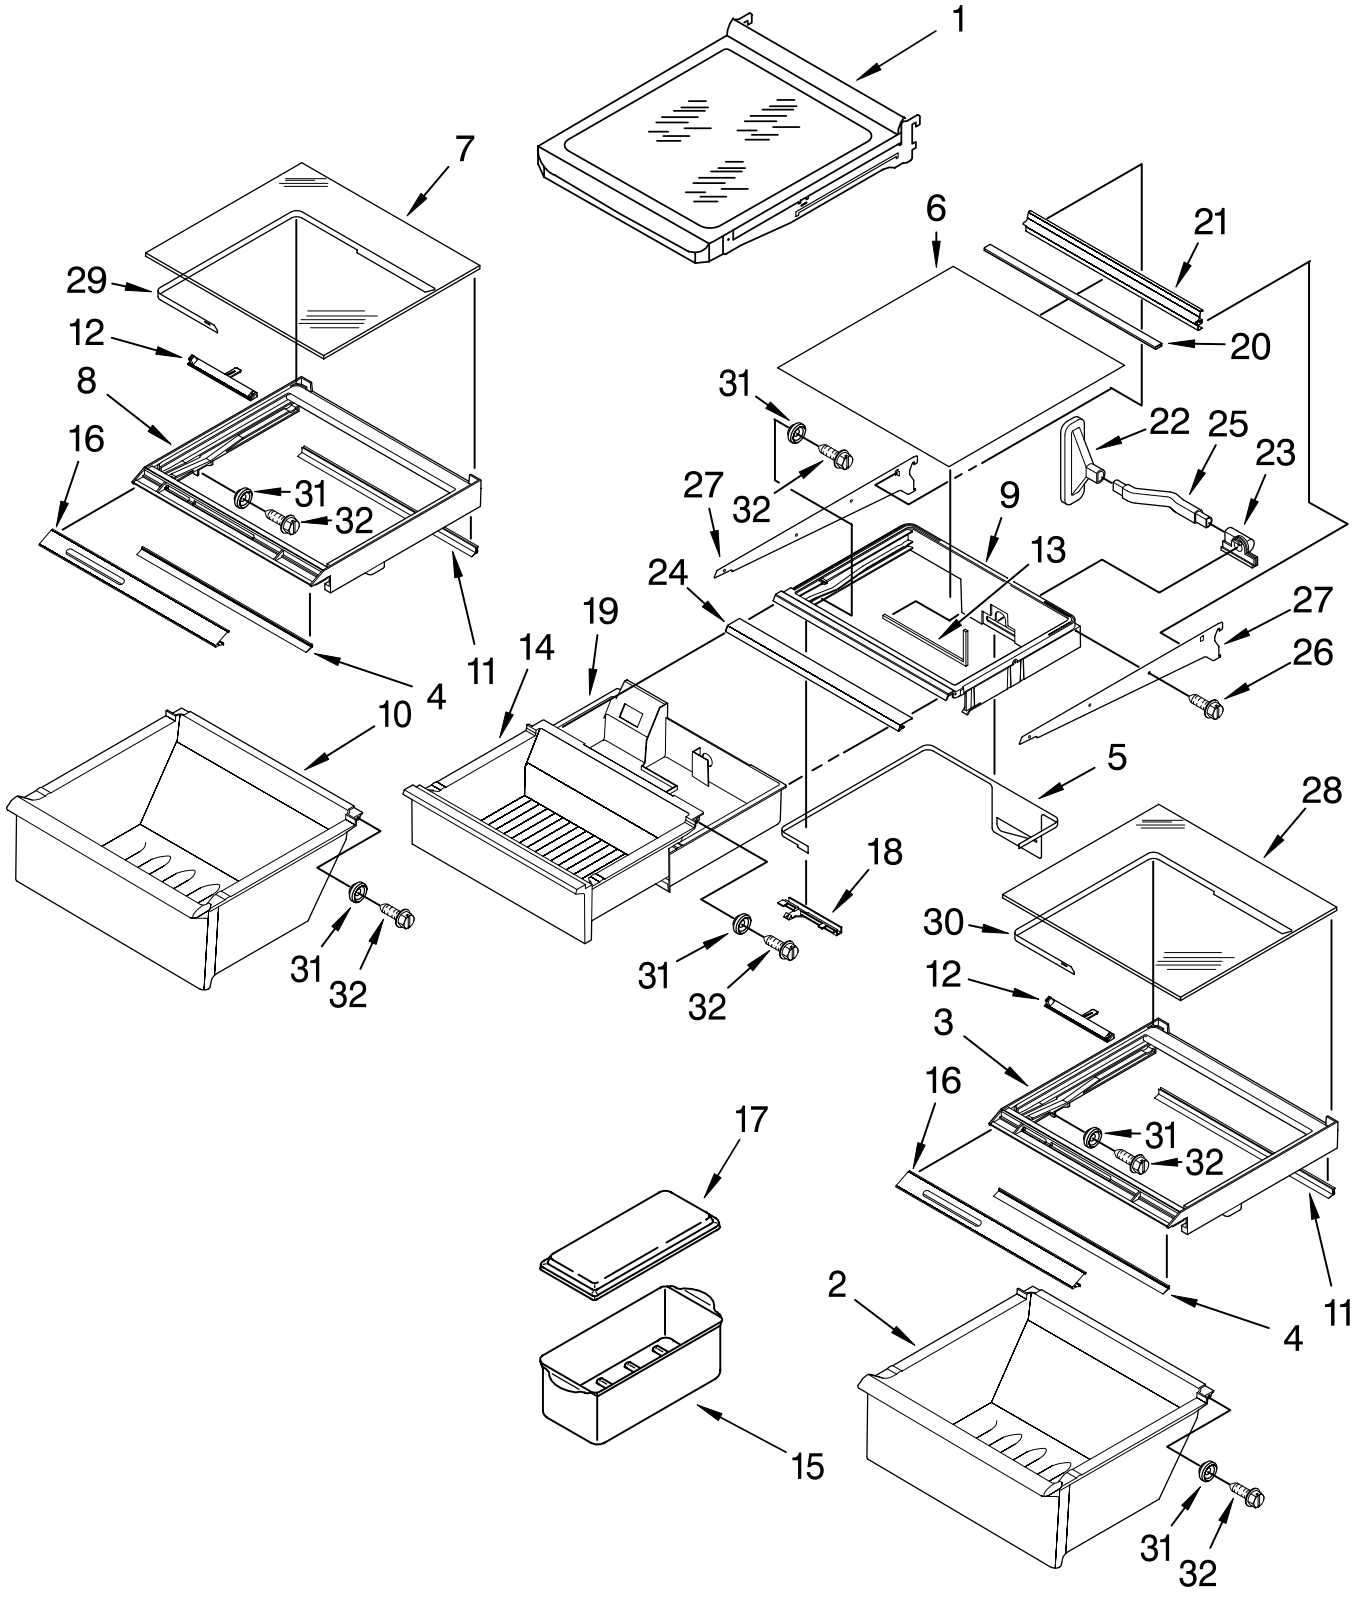

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

REFRIGERATOR SHELF PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

Illus. No.	Part No.	DESCRIPTION
1	4344062	Shelf Assembly, Glass Sliding (2)
2	4344063	Crisper Pan (Lower)
3	4343719	Cover, Crisper (Lower)
4	4343910	Gasket, Cover (Front)
5	4343882	Seal, Control
6	4344092	Glass, Meat Cover
7	4344096	Glass, Crisper Cover (Upper)
8	4343718	Cover, Crisper (Upper)
9	4343883	Frame, Meat Pan
10	4344064	Crisper Pan (Upper)
11	4343909	Gasket, Rear
12	4344095	Slide, Humidity Control
13	4343886	Gasket
14	4344091	Meat Pan
15	2169933	Egg Bin
16	4344097	Trim, Front (2)
17	2169935	Cover
18	4343881	Slide, Control
19	4343877	Sleeve
20	4343875	Extrusion
21	4343876	Trim, Rear
22	4343878	Grommet, Air Duct
23	4343880	Extension, Air Duct
24	4344090	Trim, Frame
25	4343879	Air Duct
26	4343874	Screw
27		Shelf Arm
	4343884	Left Side
	4343885	Right Side
28	4343916	Glass, Crisper Cover (Lower)
29	4343911	Band, Crisper (Upper)
30	4343915	Band, Crisper (Lower)
31	4344093	Roller
32	4344094	Screw

FREEZER LINER PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

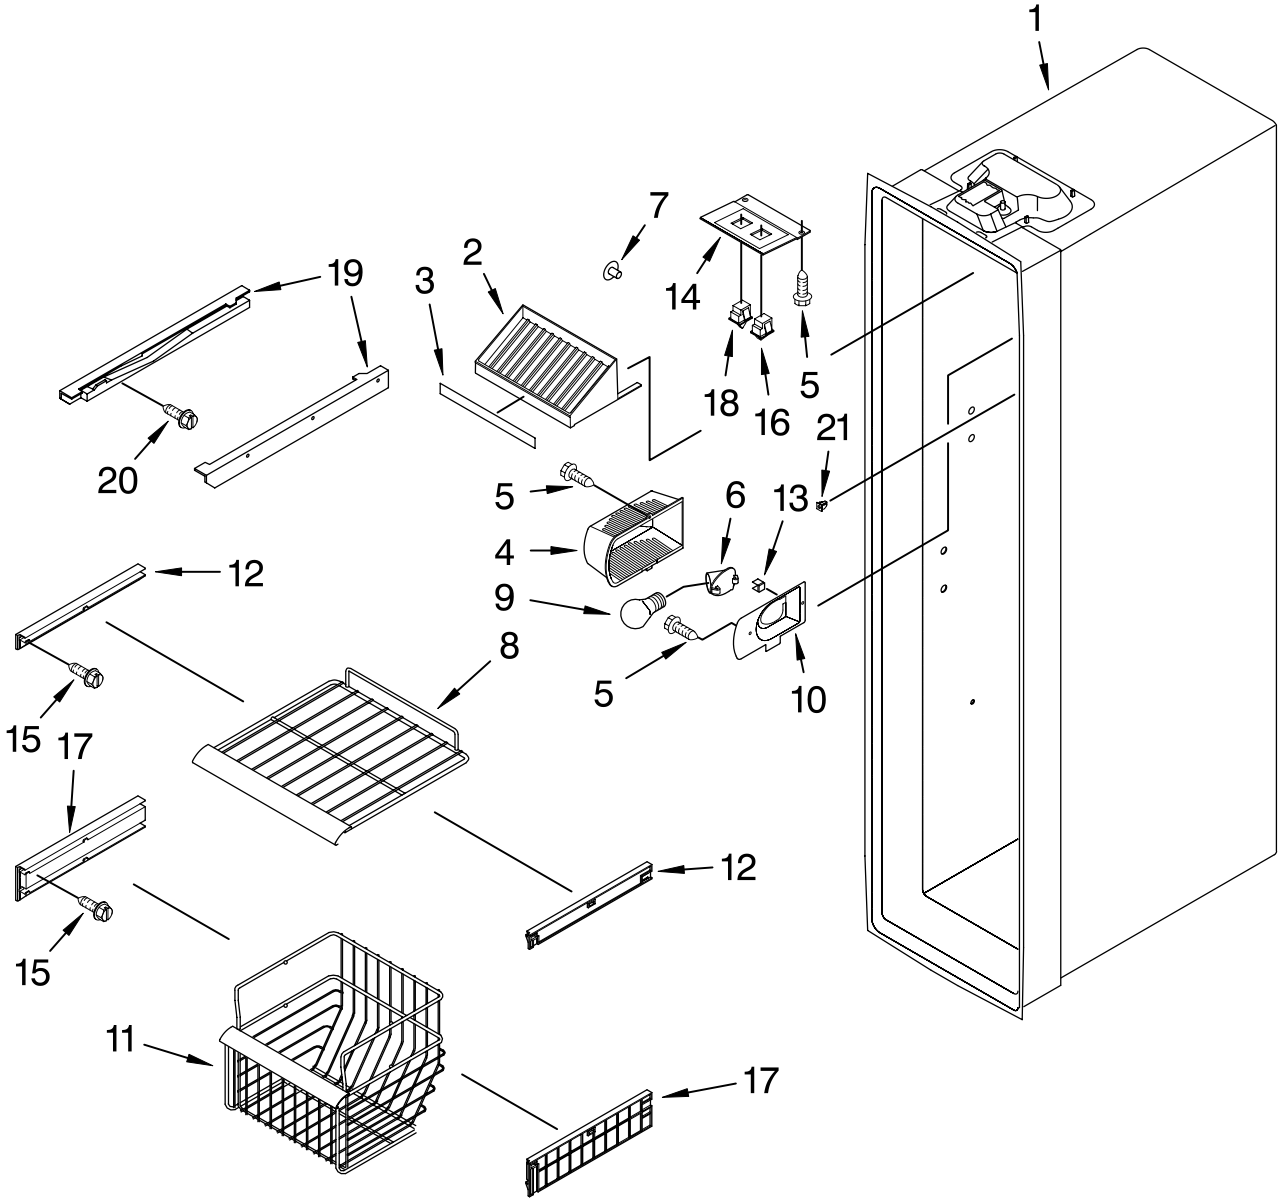

Illus. No.	Part No.	DESCRIPTION
1		Liner (Not A Seviceable Part)
2	4343980	Top Shelf
3	4344056	Insert, Top Shelf
4	4343645	Light Lens
5	4343665	Screw
6	4343643	Light Socket
7	4343723	Support, Stud (2)
8	4344061	Shelf (2)
9	4343660	Light Bulb
10	4343644	Plate, Socket
11	4344065	Basket, Slope (2)
12		Shelf Track (Single)
	4343744	Right Side
	4343745	Left Side
13	4343682	Ground Clip
14	4343929	Cover, Switch
15	4343675	Screw
16	4343930	Switch, Light
17		Shelf Track
	4343664	Right Side (2)
	4343663	Left Side (2)
18	4343931	Switch, Fan
19		Slide, Ice Container
	4343709	Left Side
	4343708	Right Side
20	4343653	Screw
21	4343657	Grommet, Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MOTOR AND ICE CONTAINER PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

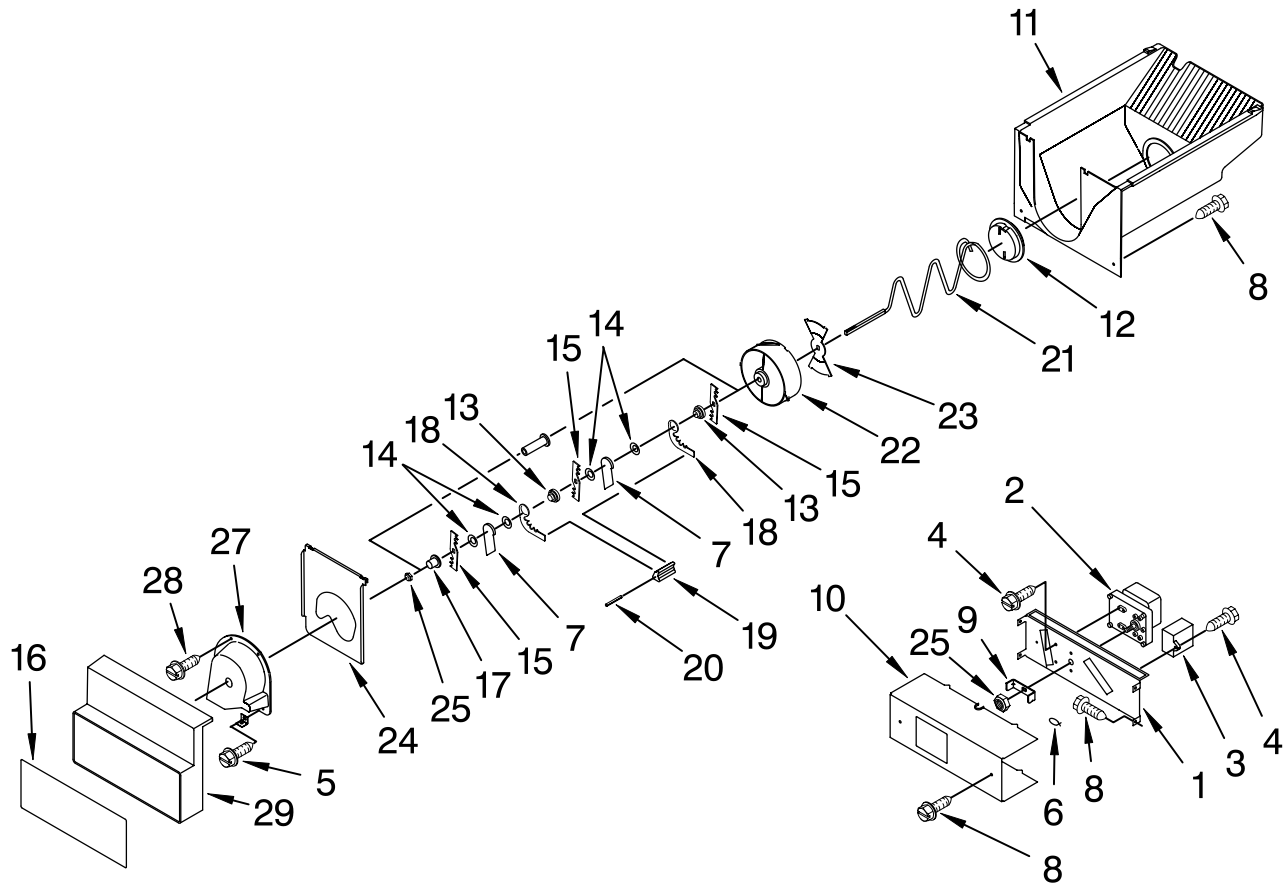

Illus. No.	Part No.	DESCRIPTION
1	4343667	Bracket, Motor
2	4343639	Motor, Dispenser
3	4343712	Capacitor
4	4343670	Screw
5	4343898	Screw
6	4343982	Clip, Wiring
7	4343904	Damper, Ice
8	4343665	Screw
9	4343640	Coupling, Motor
10	4343638	Cover, Motor
11	4343896	Ice Container
12	4343893	Stop, Cone
13	4343905	Spacer, Step (2)
14	4343890	Spacer, Wavered
15	4343903	Blade, Rotary
16	4343892	Insert, Cover
17	4343902	Spacer
18	4343901	Blade, Fixed (2)
19	4343907	Block, Blade
20	4343906	Roll Pin
21	4343894	Conveyor
22	4343895	Drum
23	4343891	Drive Bar
24	4343899	Front, Ice Crusher
25	4343641	Nut, Locking
27	4343900	Housing, Crusher
28	4343908	Screw
29	4343897	Front Cover, Ice Container

REFRIGERATOR DOOR PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

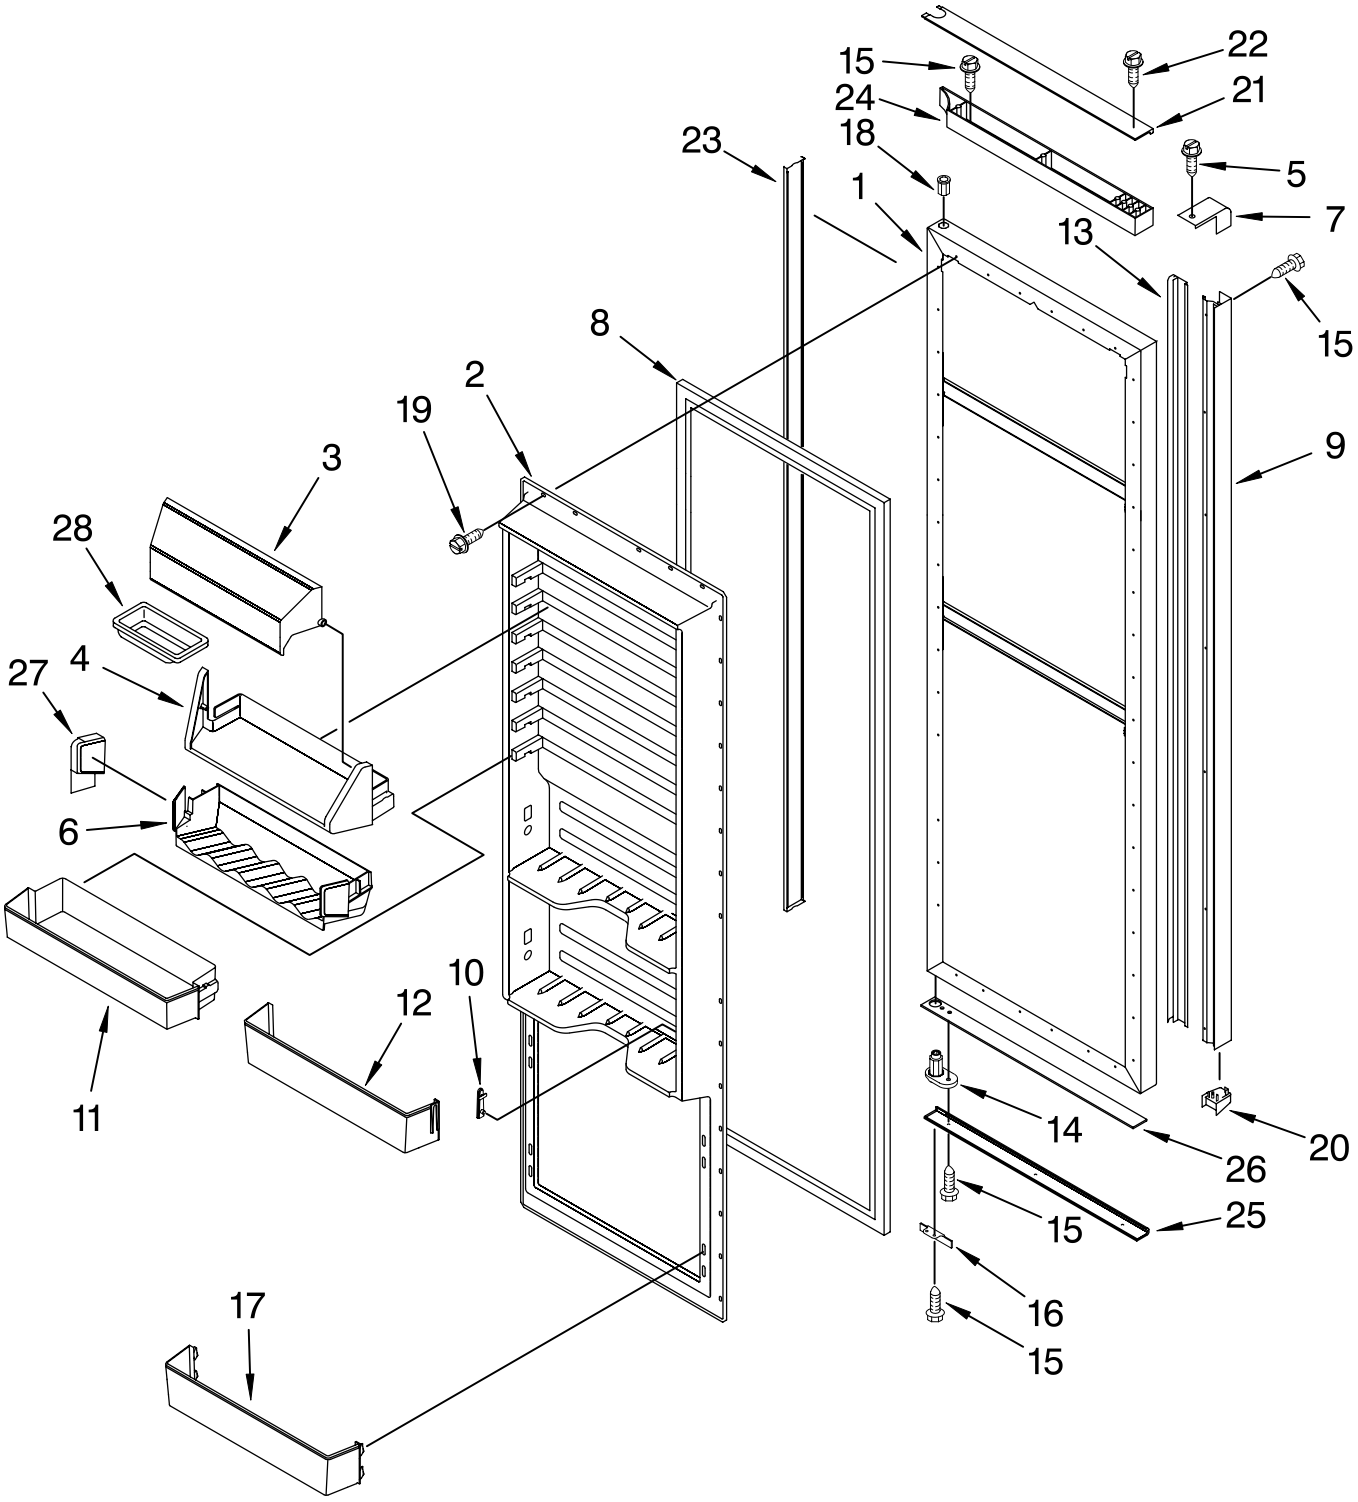

REFRIGERATOR DOOR PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

Illus. No.	Part No.	DESCRIPTION
1		Refrigerator Door Panel (Includes Insulation)
	4344024	White
	4344025	Almond
	4344026	Black
2	4343804	Interior Panel
3	4343816	Door, Dairy
4	4343809	Shelf, Dairy
5	4343693	Screw
6	4344087	Can Holder
7		Cap, Handle Top
	4344102	White
	4344103	Almond
	4344104	Silver
8		Door Gasket, Magnetic
	4343812	White
	4343813	Black
9		Door Handle
	4344105	White
	4344106	Almond
	4344107	Silver
10	4343810	Clip, Retainer
11	4344086	Shelf Bin
12	4344084	Shelf Bin (2)
13		Insert, Handle
	4344111	White
	4344112	Almond
	4344113	Silver
14		Door Closer, Upper Cam
	4343939	White
	4343938	Black
15	4343675	Screw
16		Bracket, Door Stop
	4343807	White
	4343808	Almond
	4343806	Black
17	4344085	Shelf Bin (2)
18		Hinge Sleeve
	4343943	White
	4343942	Black
19	4343811	Screw
20		Cap, Bottom
	4344117	White
	4344118	Almond
	4344119	Silver
21		Trim, Door (Top)
	4343612	White
	4343613	Almond
	8170317	Black
22	4343611	Screw
23		Trim, Door (Side)
	4343616	White
	4343617	Almond
	4343615	Silver
24		Extension
	4344009	White
	4344010	Almond
	4344011	Black
25		Trim, Door
	4344027	White
	4344028	Almond
	4344029	Silver
26	4344030	Support, Insert
27		Endcap, Can Holder
	4344089	Right Side
	4344088	Left Side
28	1125936	Butter Dish

Parts Not Illustrated and Optional Parts (Not Included)

PERIMITER TRIM KITS
- 4378873 Silver
- 4378874 Almond
- 4378875 White

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

FREEZER DOOR PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

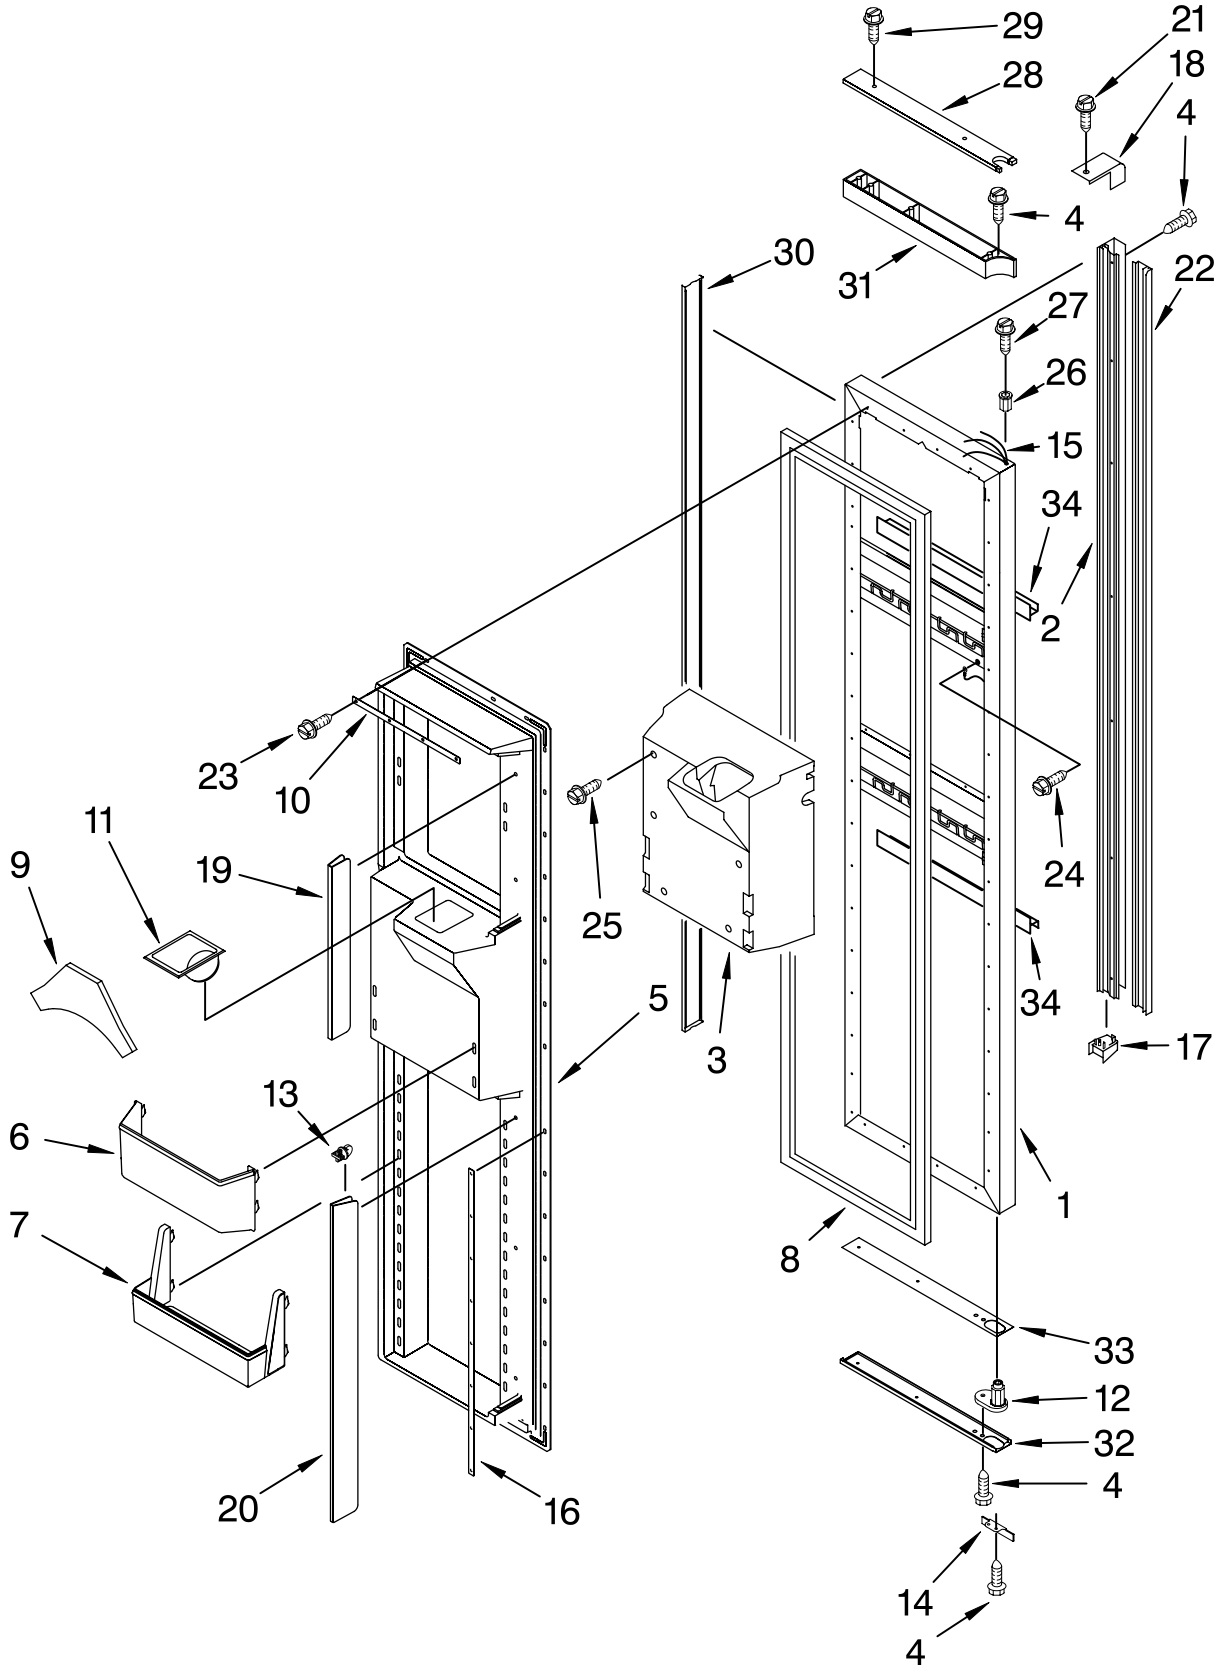

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

FREEZER DOOR PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

Illus. No.	Part No.	DESCRIPTION
1		Freezer Door Panel (Includes Insulation)
	4344031	White
	4344032	Almond
	4344033	Black
2		Handle
	4344108	White
	4344109	Almond
	4344110	Silver
3	4343830	Insulation, Dispenser
4	4343675	Screw
5	4343821	Interior Panel
6	4343747	Trivet, Shelf
7	4343746	Shelf Bin (4)
8		Door Gasket, Magnetic
	4343833	White
	4343834	Black
9	4343634	Seal, Ice Chute
10	4343824	Retainer (Top & Bottom)
11	4343633	Chute, Ice
12		Door Closer, Upper Cam
	4343941	White
	4343940	Black
13	4343825	Clip, Removable Door Dike
14		Bracket, Door Stop
	4343807	White
	4343808	Almond
	4343806	Black
15	4343826	Harness, Door
16	4343835	Retainer (Side)
17		Cap, Bottom
	4344120	White
	4344121	Almond
	4344122	Silver
18		Cap, Top
	4344099	White
	4344126	Almond
	4344127	Silver
19	4343836	Removable Door Dike, Top
20	4343837	Removable Door Dike, Bottom
21	4343693	Screw
22		Insert, Handle
	4344114	White
	4344115	Almond
	4344116	Silver
23	4343811	Screw (42)
24	4343691	Screw
25	4343840	Button Plug
26		Hinge Sleeve
	4343945	White
	4343944	Black
27	4343725	Screw, Ground
28		Trim, Door (Top)
	4343608	White
	4343609	Almond
	4343610	Silver
29	4343611	Screw
30		Trim, Door (Side)
	4343635	White
	4343637	Almond
	4343636	Silver
31		Extension
	4344006	White
	4344007	Almond
	4344008	Black
32		Trim, Door
	4344034	White
	4344035	Almond
	4344036	Silver
33	4344037	Support, Insert
34		Retainer, Decorative Panel
	8170314	White
	8170316	Almond
	8170315	Black

DISPENSER FRONT PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

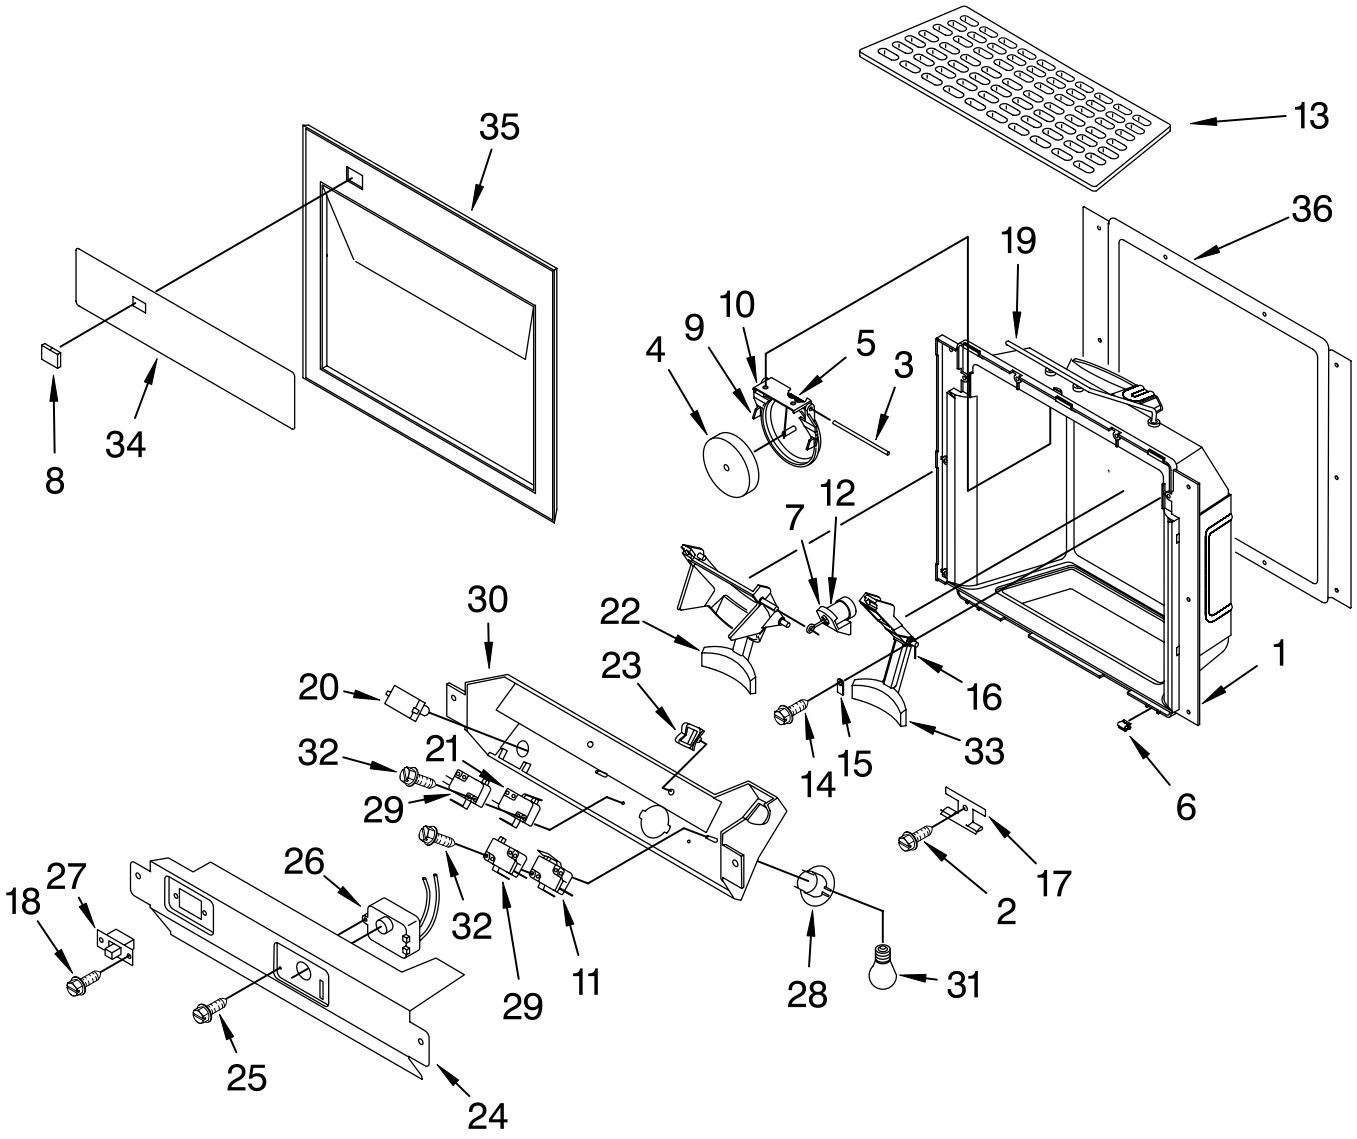

DISPENSER FRONT PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

Illus. No.	Part No.	DESCRIPTION
1		Housing, Dispenser (Includes Heater)
	4343827	White
	4343828	Almond
	4343829	Black
2	4343838	Screw
3	4343946	Pin, Chute Door
4	4343948	Insulation, Door
5	4343950	Spring, Chute Door
6	4343952	Clip
7	4343953	Retainer, Door Delay
8		Cap, Cube/Crush Switch
	4344047	White
	4344048	Almond
	4344049	Black
9	4343955	Door, Ice
10	4343949	Bracket, Chute Door
11	4343963	Switch
12	4343954	Mechanism Delay
13		Grille, Overflow
	4343679	White
	4343680	Almond
	4343678	Black
14	4343962	Screw
15	4343947	Clip, Lever (4)
16	4343951	Spring, Lever
17	4343823	Clip, Cover
18	4343974	Screw
19	4343701	Water Tube
20	4343966	Light Switch
21	4343968	Micro Switch
22		Lever, Ice Dispenser
	4343956	White
	4343957	Almond
	4343958	Black
23	4343969	Clip, Wire
24	4343970	Cover
25	4343971	Screw
26	4343972	Switch, Sensor
27	4344098	Switch, Cube/ Crush
28	4343967	Lamp Holder
29	4343964	Switch (2)
30	4343832	Bracket, Control
31	4343839	Bulb, Light
32	4343965	Screw
33		Lever, Water Dispenser
	4343959	White
	4343960	Almond
	4343961	Black
34		Plaque, Front Cover
	4344057	White
	4344058	Almond
	4344059	Black
35		Front Cover, Housing
	4344044	White
	4344045	Almond
	4344046	Black
36	4343831	Gasket

AIR FLOW PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

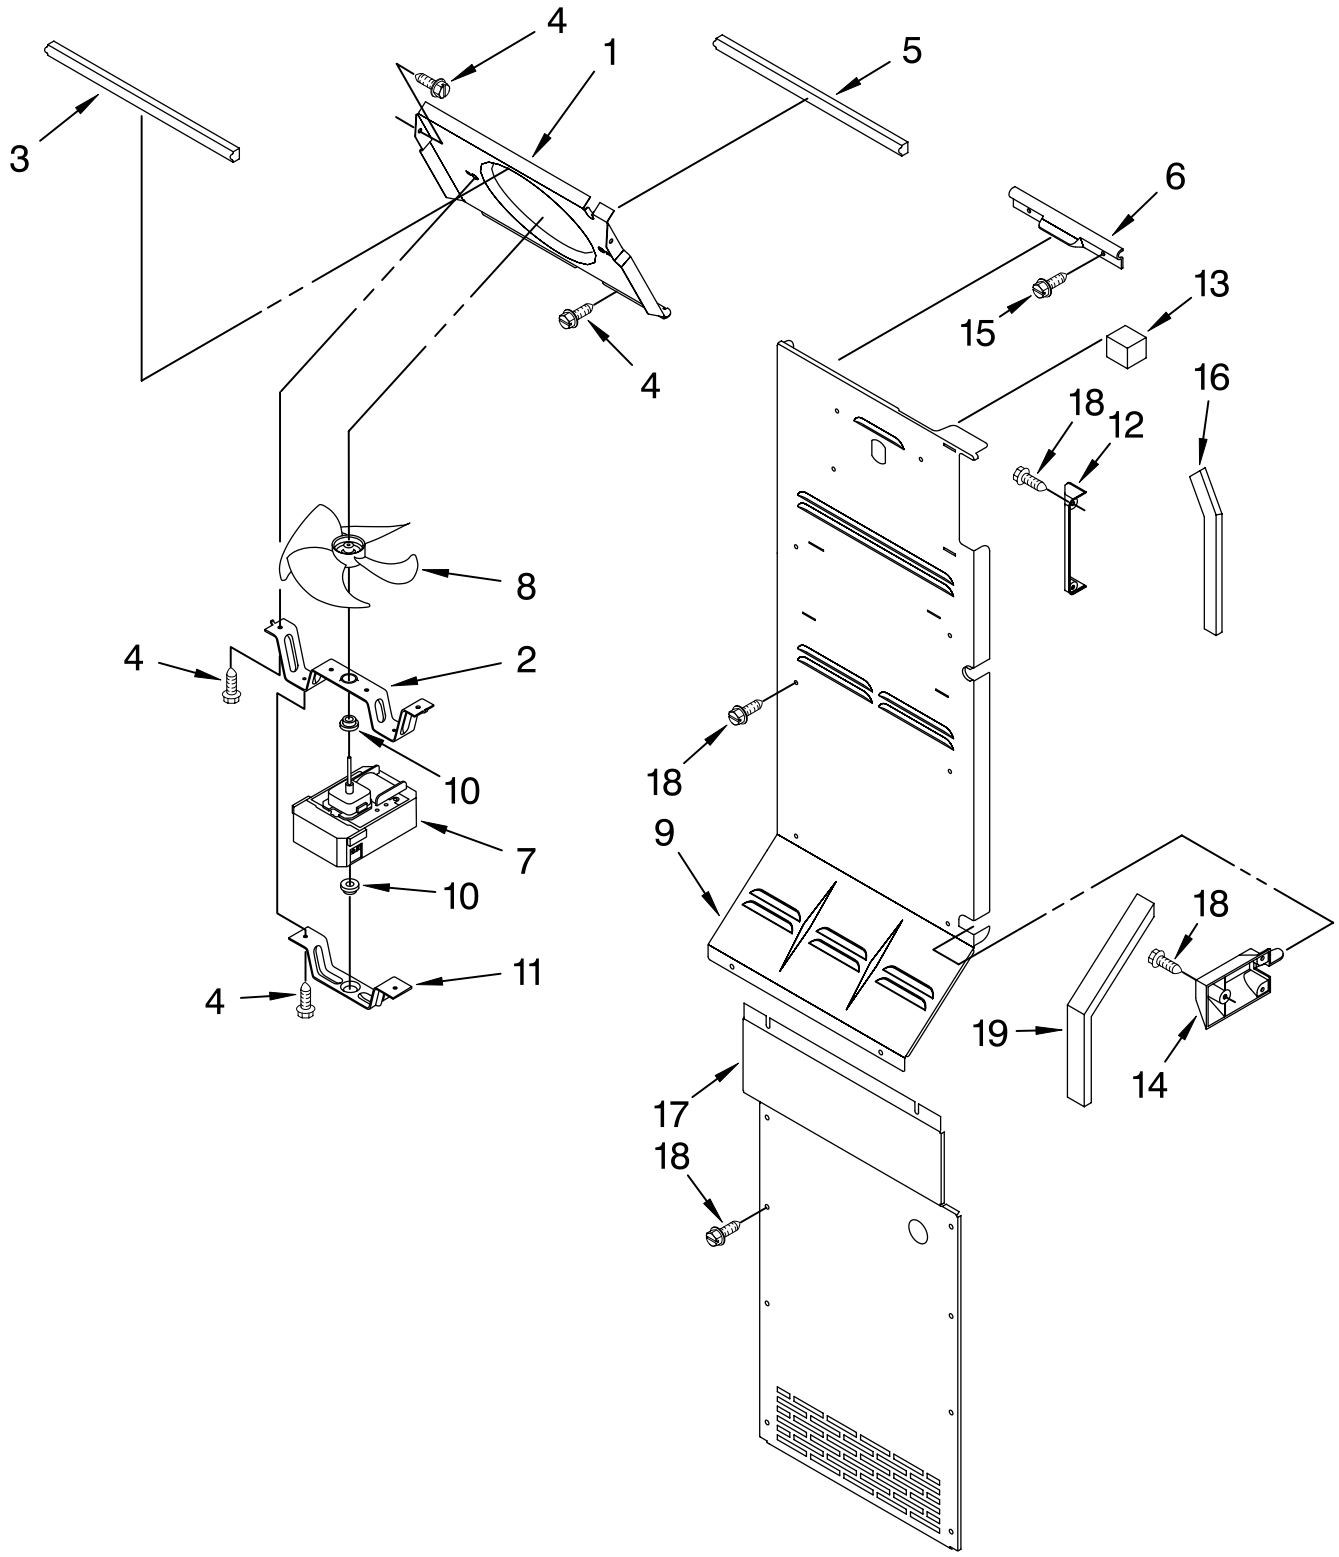

AIR FLOW PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

Illus. No.	Part No.	DESCRIPTION
1	4343799	Fan Shroud
2	4343935	Retainer, Fan Motor
3	4343791	Foam Seal
4	4343749	Screw
5	4343789	Foam Seal
6	4343687	Clip
7	4343793	Fan Motor
8	4343936	Fan Blade
9	4343655	Rear Cover
10	4343934	Fan Grommet (2)
11	4343937	Bracket, Motor
12	4343671	Cover, Air Supply
13	4343688	Gasket Cover
14	4343672	Cover, Air
15	4343675	Screw
16	4343673	Gasket
17	4343750	Cover, Evaporator
18	4343665	Screw
19	4343822	Gasket, Foam

UNIT PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

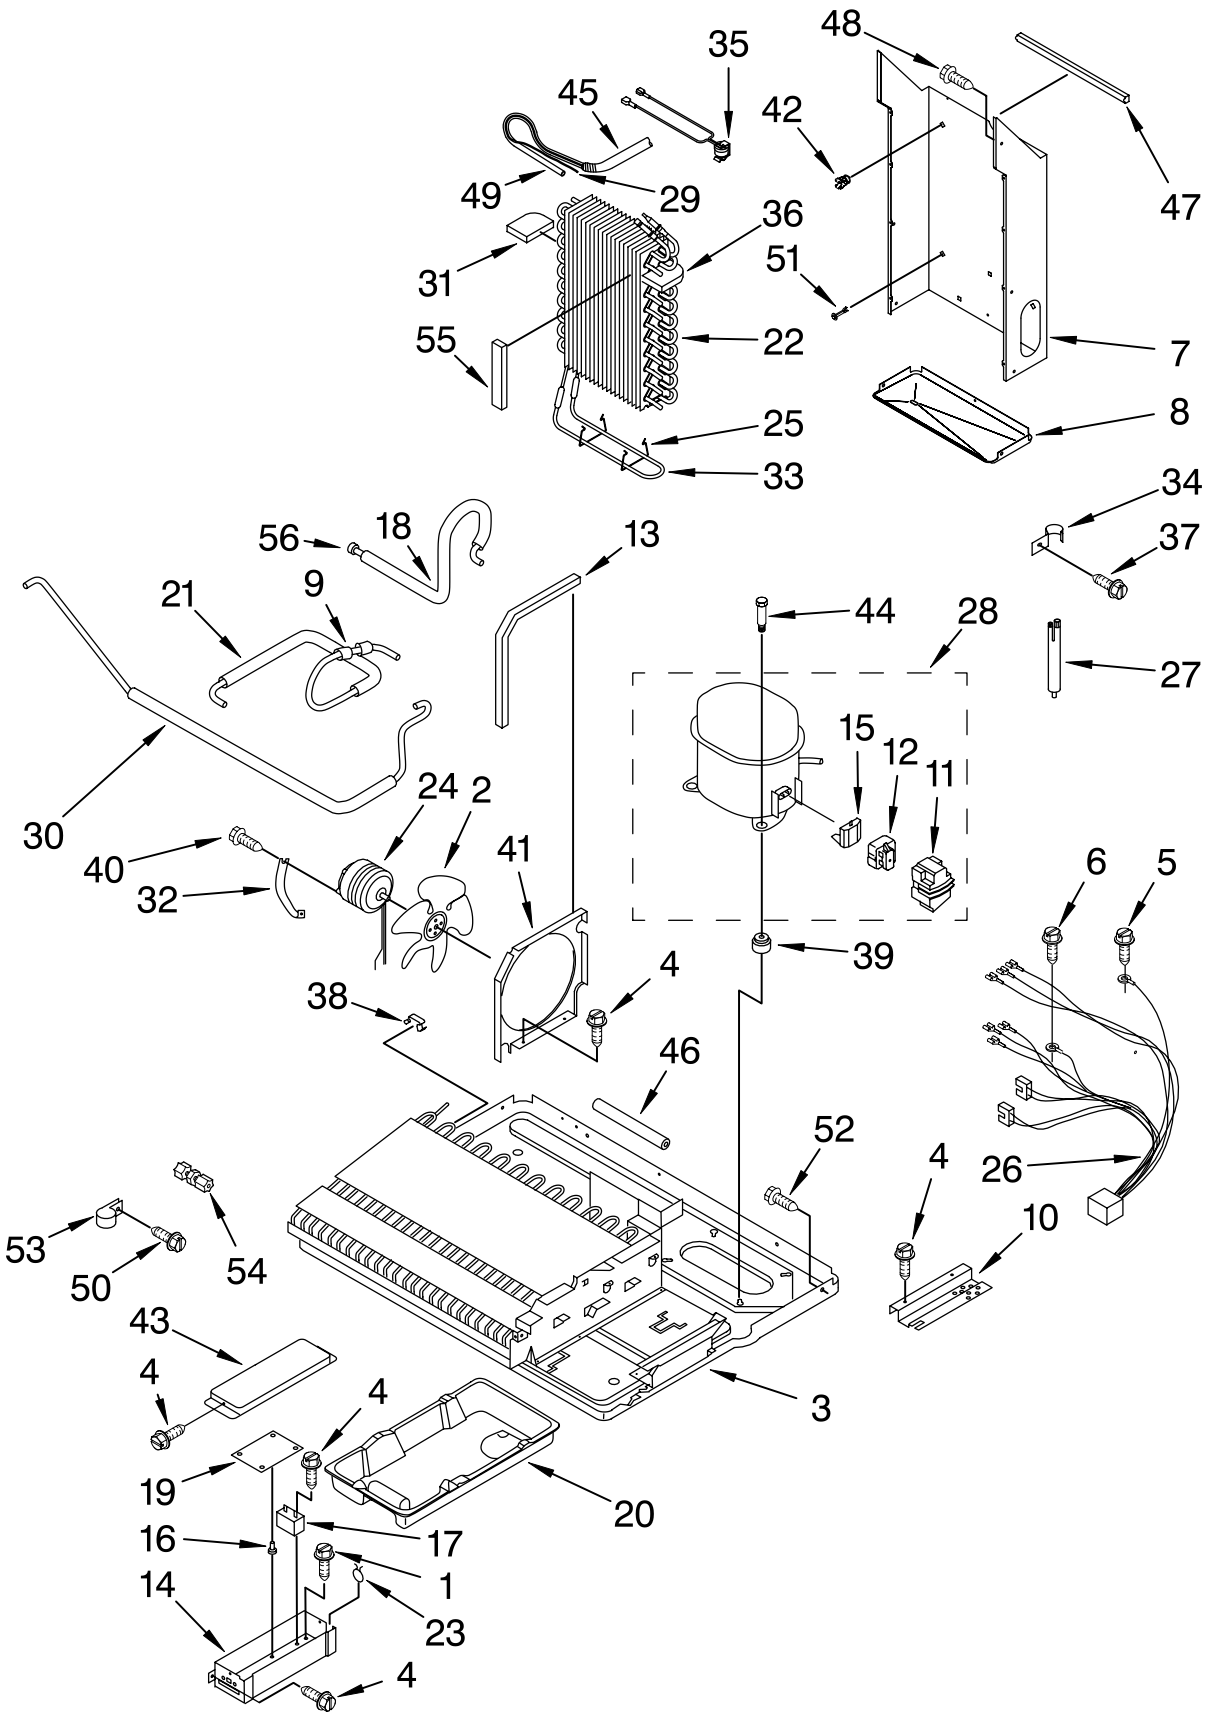

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UNIT PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

Illus. No.	Part No.	DESCRIPTION
1	4343865	Screw
2	4343843	Fan, Blade
3	4343841	Condenser & Pan Assembly
4	4343861	Screw
5	4343691	Screw
6	4343860	Screw
7	4343762	Heat Shield
8	4343792	Drain Pan
9	4343872	Dampner
10	4343867	Shelf, High Voltage Box
11	4343852	Cover
12	4343849	Overload
13	4343871	Gasket
14	4343854	High Voltage Box
15	4343850	Relay
16	4343868	Support
17	4343851	Capacitor
18	4343870	Sleeve
19	4343842	Control
20	4343863	Drain Pan
21	4343857	Tube, Discharge
22	4343748	Evaporator
23	4343869	Clamp, Wire
24	4343855	Motor, Fan (Includes Speed Nut)
25	4343918	Clip, Heater
26	4343846	Harness, Unit
27	4343761	Drier
28	4343856	Compressor (Includes Items 11, 12, 15, 17 & 27)
29	4343919	Heat Exchanger
30	4343858	Tube, Condenser/ PC Loop
31	4343921	Block, Evaporator (Left Side)
32	4343853	Bracket, Fan Motor
33	4343920	Heater, Defrost
34	4343763	Clip, Drier
35	4343917	Bi−Metal, Defrost
36	4343922	Block, Evaporator (Right Side)
37	4343759	Screw
38	4343866	Clip, Condenser
39	4343845	Grommet (4)
40	4343859	Screw
41	4343862	Air Baffle
42	4343798	Clip, Evaporator
43	4343864	Cover, High Voltage Box
44	4343847	Screw
45	4343923	Cover, Tubing
46	4343844	Sleeve
47	4343789	Seal
48	4343749	Screw
49	4343924	Sleeve
50	4343652	Screw
51	4343797	Clip, Evaporator
52	4343764	Screw
53	4343705	Clip, Tube
54	4343648	Union
55	4343753	Gasket, Foam
56	4343848	Tube, Suction

Illus. No.	Part No.	DESCRIPTION

Following Parts Not Illustrated and Optional Parts Not Included

	978025	Valve, Access (1/4")
	978026	Valve, Access (5/16")
	978027	Valve, Access (3/8")
	978028	Valve, Access (1/2")
	978029	Valve, Access (5/8")
	978030	Valve, Access (3/4")
	876764	Valve, Access (3/16")

REFRIGERANT CHARGE

5.125 oz.
(R−134A)

ICEMAKER PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

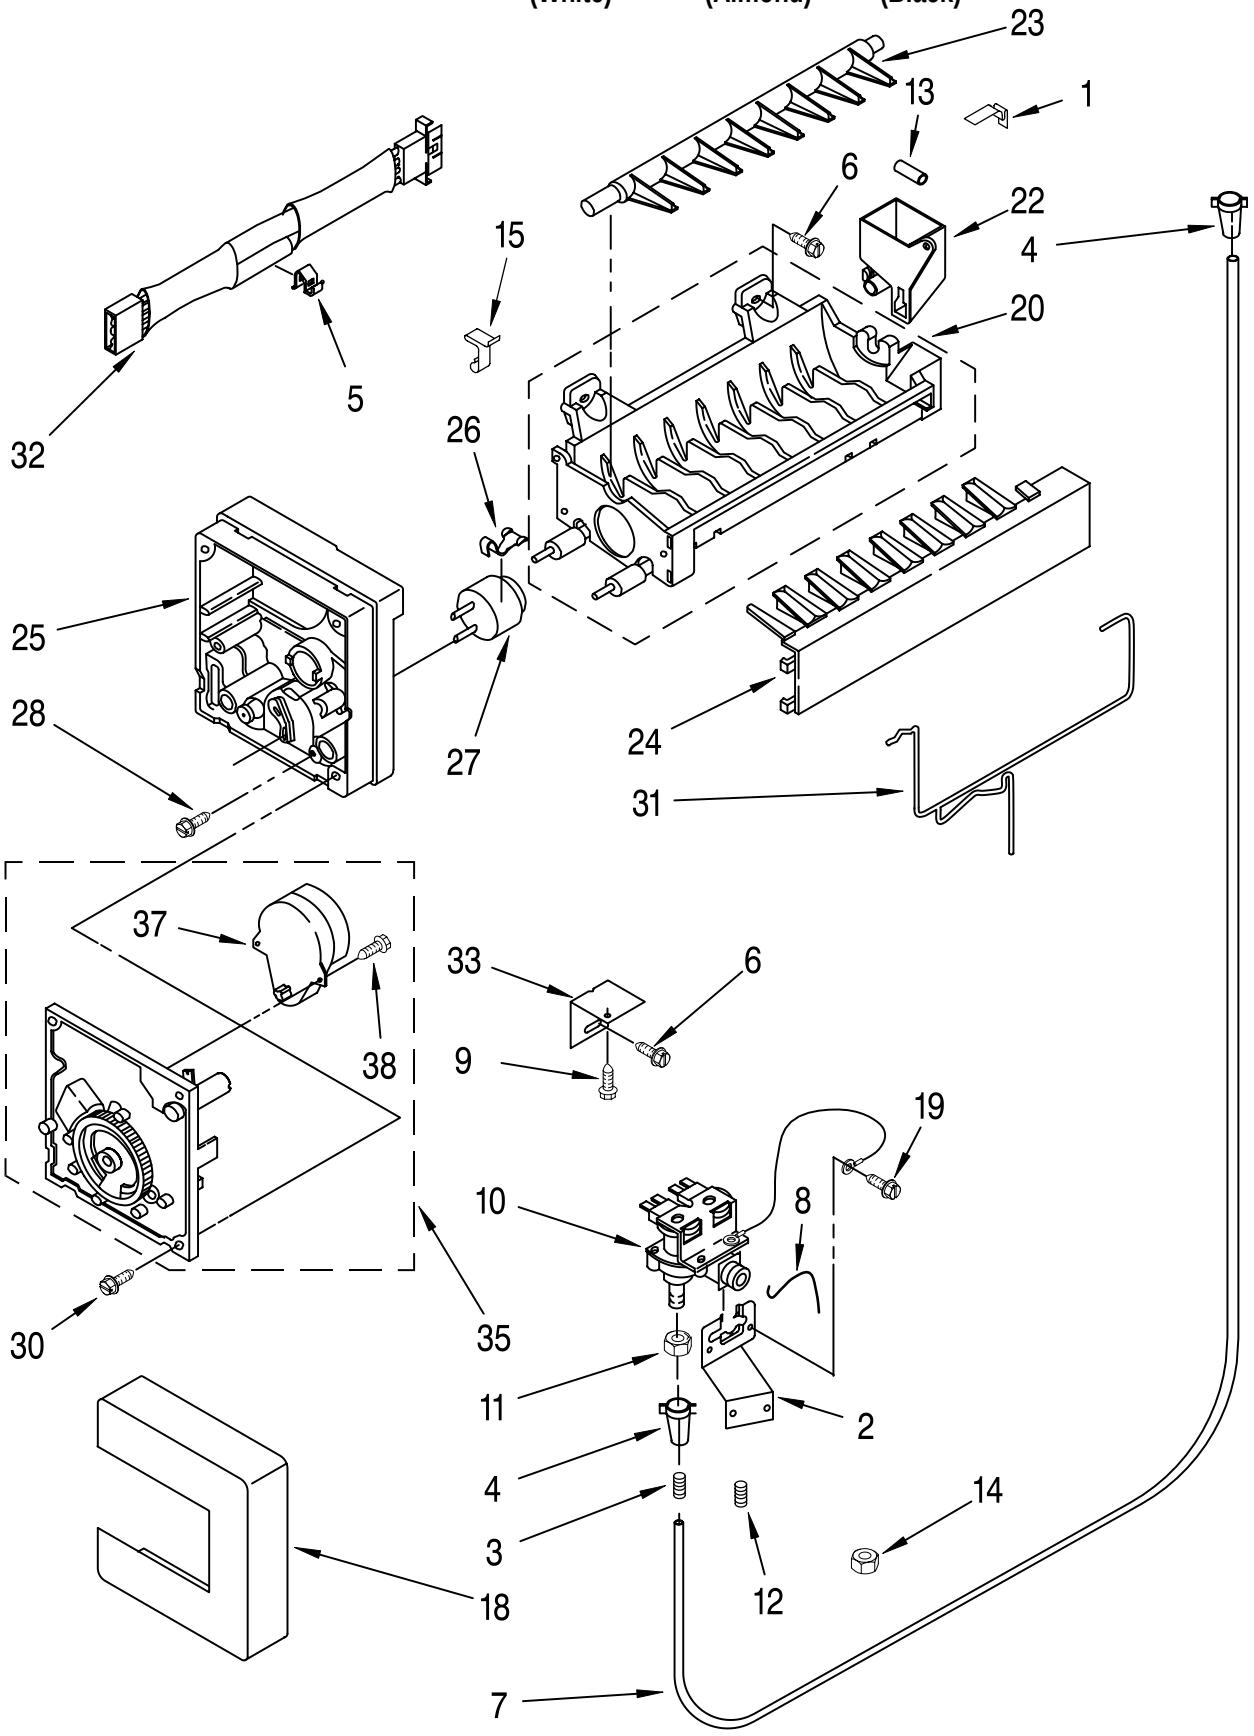

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

ICEMAKER PARTS

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

Illus. No.	Part No.	DESCRIPTION
1	4343703	Clip
2	4343706	Bracket, Water Valve
3	4343685	Spring
4	4343713	Insert, Tube
5	628379	Clip, Fuse
6	4343690	Screw (3)
7	4343701	Tube, Water
8	4343697	Clip, Water Valve
9	4343652	Screw
10	4343698	Valve, Solenoid
11	4343704	Nut, Compression
12	4343686	Spring
13	4343722	Tube, Water Inlet
14	4343647	Nut
15	4343984	Clamp
18	4343696	Cover
19	4343694	Screw
20	628228	Mold & Heater Assembly (Also Order 542638 Silicone Grease)
22	628356	Cup−Water Fill
23	627843	Ejector
24	627788	Ice Striper
25	627790	Support
26	627796	Retainer, Thermostat
27	627985	Thermostat (Also Order 542369 Cement Alumilastic)
28	489322	Screw
30	489276	Screw
31	4343695	Shut Off Arm
32	4343983	Harness, Wiring
33	4343699	Bracket
35	628399	Module Assembly (Includes Items 37 & 38)
37	628398	Motor
38	489136	Screw
100	4317943	Complete Icemaker Assembly

PARTS NOT ILLUSTRATED

For Models: KSBS20QEWH0, KSBS20QEAL0, KSBS20QEBL0
(White) (Almond) (Black)

Illus. No.	Part No.	DESCRIPTION

Parts Not Illustrated and Optional Parts (Not Included)

Customer Touch−Up Material

	*350942	Primer, White (13 Oz. Spray Can)
	*350939	Enamel, Black (13 Oz. Spray Can)
	*350930	Enamel, White (13 Oz. Spray Can)
	*350956	Enamel, Almond (13 Oz. Spray Can)
	72017	Brush Touch−Up Kit (White)
	72107	Brush Touch−Up Kit (Almond)
	72032	Brush Touch−up kit (Black)

* not to be used where the paint may make contact with the door gaskets.

Miscellaneous

	212643	Sealer, Gum (4 Feet)
	479502	Tape, Vinyl (3/4 x 108")
	876370	Kit, Insulation (2 Pcs. x 3" x 24" X 48")
	876305	Kit, Insulation (14 Pcs. x 3" x 24" x 48")
	978941	Insulation, Fiberglass (63−1/2" x 35−1/2" X 2−5/8)
	876029	Kit, Foam Slab (30" x 32−1/2" x 1−1/2")
	505587	Sealer, Mastic (1 Qt.)
	503695	Cork, Sealer (1/4 Pound)
	511873	Touch−Up, White Porcelain (2 Oz.)
	542638	Grease, Silicone (1/2 Oz.)
	542639	Cement, Alumilastic (1−1/4 Oz.)
	606755	Bag, Insulation (36−5/8" x 46")
	799833	Kit, Evaporator Repair (Aluminum Epoxy)
	833938	Kit, Terminal Connector
	4343700	Ice Container Assembly

Refinishing Material

	799340	Enamel, Black (1 Qt. Uncut)
	799344	Enamel, White (1 Qt. Uncut)
	978883	Enamel, Almond (1 Qt. Uncut)

LITERATURE PARTS

	LIT4343602	Use & Care Guide
	LIT4343600	Tech Sheet
	LIT4343656	Wiring Diagram
	LIT4344134	Energy Label
	LIT628370	Modular Icemaker Service Sheet

TORX SCREW WRENCH

	1117510	Torx Key